NETGEAR®

Nighthawk LTE Mobile Hotspot Router

User Manual

Model MR1100

September 2017 202-11799-01

Support

See your warranty card for warranty and service information.

For additional information, visit www.netgear.com/support to access the full user manual (this document) and to download firmware updates.

Compliance

For regulatory compliance information, visit http://www.netgear.com/about/regulatory.

See the regulatory compliance document before connecting the power supply.

Trademarks

© NETGEAR, Inc., NETGEAR and the NETGEAR Logo are trademarks of NETGEAR, Inc. Any non-NETGEAR trademarks are used for reference purposes only.

Contents

Chap	ter 1	Get	Star	ted
------	-------	-----	------	-----

	Get to Know Your Mobile Router	8
	Top Front View	
	Power Button	
	Status LED	
	LCD Screen	
	Rear View	
	Optional Accessories	
	Install the Micro SIM Card and the Battery	
	Download the NETGEAR Mobile App	
	Power On Your Mobile Router	
	Set Up the Mobile Router	
	Use a Web Browser to Set Up the Mobile Router	
	Use the Mobile App to Set Up the Mobile Router	14
Cl	napter 2 Connect to the Mobile Router	
	Connect to the Mobile Router Network	16
	WiFi Connection	16
	Tethered Connection	17
	Use the NETGEAR Mobile App to Access the Mobile Router	17
	Use a Web Browser to Access the Mobile Router	18
Cł	napter 3 Manage Battery Usage and Charging	
	Extend Battery Life	21
	Recharge the Battery	
	Quick Charge the Battery	
	Recharge the Battery From a Wall Socket	
	Recharge the Battery From a Computer USB Port	
	Use the USB Type C Cable to Charge Only	23
	Use the Mobile Router to Jump Boost Another Device	24
	Change the LCD Screen Display	
	Change the LCD Screen Time-Out and Brightness From the NETGEAR Mo	bile
	App	
	Change the LCD Screen Time-Out and Brightness From a Web Browser	
	Battery Tips	
	General Battery Safety	
	Appropriate Batteries and Chargers	
	Battery Disposal	27
Cl	napter 4 Manage Your Internet Connection	
	View Your Data Usage	29
	View Data Usage on the Mobile Router LCD	
	<u> </u>	

View Data Usage From the NETGEAR Mobile App	30
View Data Usage From a Web Browser	
Offload Your Mobile Internet Connection	30
Enable Data Offloading From the NETGEAR Mobile App	
Enable WiFi Data Offloading From a Web Browser	
Enable Ethernet Data Offloading From a Web Browser	33
Specify Cellular Settings	
Specify Cellular Settings From the NETGEAR Mobile App	
Specify Cellular Settings From a Web Browser	
Enable VPN Service	
Enable VPN Service From a Web Browser	36
Chapter 5 Control Internet Access	
Set Up Parental Controls	
Access Control	
Set Up Access Control From the NETGEAR Mobile App	
Set Up Access Control From a Web Browser	
Turn Off USB Tethering	
Turn Off USB Tethering From the NETGEAR Mobile App	
Turn Off USB Tethering From a Web Browser	
Manage Website Filters	
Set Up a Schedule for Internet Access	
Edit a Schedule Rule Delete a Schedule Rule	
Enable SIM Security	
Enable SIM Security From the NETGEAR Mobile App	
Enable SIM Security From a Web Browser	
Enable Port Forwarding	
Set Up Port Filtering	
Enable DMZ	
Chapter 6 Specify Mobile Router Network Settings	
Select a WiFi Profile	49
Select a WiFi Profile From the NETGEAR Mobile App	49
Select a WiFi Profile From a Web Browser	49
Manage WiFi Settings	50
Specify WiFi Settings From the NETGEAR Mobile App	
Specify WiFi Settings From a Web Browser	
Use WPS to Connect to the Mobile Router WiFi Network	
Use WPS From the NETGEAR Mobile App	
Use WPS From a Web Browser	
Universal Plug-N-Play	
Turn UPnP Off or On From the NETGEAR Mobile App	
Turn UPnP Off or On From a Web Browser	
Enable IP Pass-Through Mode	
Specify the IP Addresses That the Mobile Router Assigns	
Disable the DHCP Server Feature in the Mobile Router	54

Chapter 7 Share Media and Storage

Manage Shared Storage Devices	57
USB Device Requirements	
Connect a USB Storage Device	57
Micro SD Card Requirements	
Install a Micro SD Card	58
View Storage Device Usage and Capacity	59
Manage Files on the Mobile Router	
Upload Media Files to Mobile Router Storage	59
Use the NETGEAR Mobile App to Manage Files on the Mobile Router	60
Use Windows File Explorer to Manage Files on the Mobile Router	60
Use MacOS Finder to Manage Files on the Mobile Router	61
Play Media	61
Chapter 8 Manage Your Mobile Router Network	
View the Network Status	62
View Mobile Router Device Status	
View Mobile Router Device Status From the NETGEAR Mobile App	
View Mobile Router Device Status From a Web Browser	
View WiFi Details	
View a Network Map	
View a Network Map From the NETGEAR Mobile App	
View a Network Map From a Web Browser	
View Connected Devices	
View the Connected Devices On the LCD	
View the Connected Devices From the NETGEAR Mobile App	
View the Connected Devices From a Web Browser	
Update the Mobile Router Firmware	
Update Firmware From an Alert	
Update Firmware From the NETGEAR Mobile App	
Update the Firmware From the Web Page	
Change the admin Password	
Manage SMS Messages	
Manage Messages From the NETGEAR Mobile App	
View or Delete Messages From a Web Browser	
Manage the LED Settings	
Back Up and Restore the Mobile Router Settings	
Back Up the Mobile Router Settings	
Restore the Mobile Router Settings	
Factory Reset	
Factory Reset From the NETGEAR Mobile App	
Factory Reset From a Web Browser	
Factory Reset Using the Reset Button	
Reboot the Mobile Router	
Reboot the Mobile Router From the NETGEAR Mobile App	
Reboot the Mobile Router From a Web Browser	
Power Off the Mobile Router	

Power Off the Mobile Router Manually	73
Power Off the Mobile Router From the NETGEAR Mobile App	
Power Off the Mobile Router From a Web Browser	74
View Details About Your Mobile Router	74
View Mobile Router Details From the NETGEAR Mobile App	74
View Mobile Router Details From a Web Browser	
Chapter 9 Frequently Asked Questions	
Why can't my device connect to the mobile router?	77
Why can't I access the Internet?	
Why is the signal indicator always low?	
Why is the download or upload speed slow?	
What do I do if I forget my admin login password?	
How do I disconnect from the mobile broadband network?	
The LCD is not lit. How do I know if the mobile router is still powered of	
How do I find my computer's IP address?	
How do I find my computer's IP address on a Windows 7, Windows Windows XP device?	
How do I find my computer's IP address on a Windows 8 device?	
How do I find my computer's IP address on a Mac OS X device?	
How do I find my computer's IP address on devices running other of	perating
systems?	
How do I find a device's MAC address?	
How do I find a device's MAC address on a Windows 7, Vista, or X	
device?	
How do I find a device's MAC address on a Windows 8 device?	
How do I find a device's MAC address on a Mac OS X device?	
Where can I find more information?	81
Chapter 10 Troubleshooting	
Diagnostics	83
The WiFi Network Name Is Not in the List of Networks	83
The No Signal Icon Displays	83
Cannot Log In to the Mobile Router Using a VPN	83
The Mobile Router Cannot Connect to a Computer Running Windows	Vista84
The Mobile Router Does Not Connect to the Cellular Network	84
Appendix A Specifications	
Mechanical Specifications	86
Environmental Specifications	
Supported RF Bands	

Get Started

1

This chapter provides an overview of the Nighthawk LTE Mobile Router Model MR1100 and instructions for how to set up your mobile router and connect to the Internet.

The chapter covers the following topics:

- Get to Know Your Mobile Router
- Install the Micro SIM Card and the Battery
- Download the NETGEAR Mobile App
- Power On Your Mobile Router
- Set Up the Mobile Router

Note Firmware updates with new features and bug fixes are available at downloadcenter.netgear.com. Some products regularly check the site and download new firmware, or you can check for and download new firmware manually. If the features or behavior of your product does not match what is described in this manual, you might need to update your firmware.

Get to Know Your Mobile Router

Your mobile router lets you create a WiFi access point in any location with cellular network coverage. Use a WiFi access point to connect your computer or mobile devices to your service provider's mobile broadband network and connect to the Internet.

Your mobile router can receive power from any of the following sources:

- Rechargeable battery included with the mobile router
- Wall socket using the AC adapter and USB cable
- USB port on your computer

Top Front View

The following figure shows the top front view of the mobile router



Figure 1. Mobile router buttons and features

Number	Description	
1	LCD screen	
2	Power button	
3	LED	

Power Button

Use the **Power** button to wake the mobile router and to power the device on and off. The **Power** button is on upper side panel of the mobile router (see *Top Front View* on page 8).

Table 1. Power button usage

Desired Result	Action
Turn on the mobile router.	Press and hold the Power button for three seconds.
Turn off the mobile router.	Press and hold the Power button for five seconds.
Wake the mobile router.	Press and quickly release the Power button.
Switch between screens.	Press and quickly release the Power button.

Status LED

The status LED indicates the mobile router's connection status.

Table 2. LED indicator patterns

LED	What the Pattern Means	
Slow blue blink	The mobile router is ready.	
Fast blue blink	The mobile router is transferring data.	
Slow amber blink	The mobile router is not ready.	

LCD Screen

The LCD screen displays information shown in the following figure.

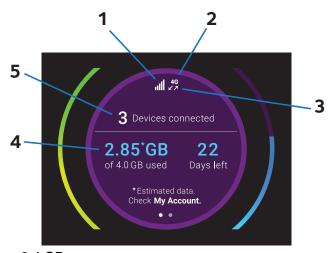


Figure 2. LCD screen

I	Number	Description
F	1	Signal strength
[2	2	Network type

(Continued)

Number	Description
3	Active uplink or downlink (displays only during data transfer)
4	Data usage
5	Number of connected devices

Rear View

The following figure shows the rear view of the mobile router.



Figure 3. Mobile router rear view

Number	Description	
1	TS9 connector 1	
2	USB type A port	
3	USB type C port	
4	Ethernet port	
5	TS9 connector 2	

The mobile router rear panel includes the following ports and connectors:

- USB type A port. Connect a USB storage device or charge a smartphone.
 For information about USB storage devices, see Connect a USB Storage Device on page 57.
 For information about charging a smartphone, see Use the Mobile Router to Jump Boost Another Device on page 24.
- **USB type C port**. Connect the USB type-C cable that came in the package to recharge the battery or for a tethered connection to a computer.
 - For more information about recharging the battery, see *Recharge the Battery From a Wall Socket* on page 22 and *Recharge the Battery From a Computer USB Port* on page 23.
 - A tethered connection to a computer lets you access the mobile router from a web browser without a WiFi connection. See *Tethered Connection* on page 17.
- Ethernet port. You can connect an Ethernet device to this port and you can offload your mobile Internet data. The Ethernet connection speed is about 500 Mbps.

When you are using an Ethernet connection, you can use the USB type C cable and the AC adapter to recharge the mobile router battery.

Note You cannot use an Ethernet connection and use a tethered connection to access the mobile router at the same time.

For information about offloading data, see *Offload Your Mobile Internet Connection* on page 30. For information about how to use a charge-only tethered connection, see *Use the USB Type C Cable to Charge Only* on page 23.

• **TS9** antenna connectors. Two SMK-TS9 connectors for an optional MIMO antenna. For more information about connecting an external antenna, see *External Antennas* on page ?.

Optional Accessories

The following optional accessories are also supported:

- Optional micro SD card (sold separately)
- Optional antennas (sold separately)

For more information, visit netgear.com/XXXXaccessories.

Install the Micro SIM Card and the Battery

To obtain an activated micro SIM (3FF format) card, contact AT&T.



Number	Description
1	Cover
2	Micro SD card slot
3	Enlargement of the micro SD card slot
4	Micro SIM card slot
5	Battery
6	Enlargement of battery contacts

To install the SIM card and the battery:

- 1. Make sure that power to the mobile router is off.
- Remove the cover on the bottom of the mobile router.Place your thumbs on the arrows on the cover and press down while sliding the cover up.
- 3. Carefully slide the micro SIM card into the slot.
- 4. Align the battery connectors and insert the battery.
- 5. f you purchased a micro SD card, insert the card into the micro SD slot.
- 6. Replace the mobile router cover.

Download the NETGEAR Mobile App

The NETGEAR Mobile app lets you set up the mobile router. After initial setup, you can use the app to view or change the mobile router settings. You can also use it to play and share media, and enable the travel router feature.

►To download the NETGEAR Mobile app:

- 1. Connect your mobile device to the Internet.
- 2. Open a web browser.
- 3. Visit http://netgear.com/mobileapp.
- 4. Download the NETGEAR Mobile app.

Power On Your Mobile Router



Number	Description	
1	LCD screen	
2	Power button	
3	LED	

► To power on your mobile router:

- Press the **Power** button on your mobile router.
 The LED lights blue.
- 2. To view the WiFi name and password, press and quickly release the **Power** button to toggle through the mobile router LCD displays.

Set Up the Mobile Router

If you are at home, we recommend that you use web browser access to set up the mobile router, but you can also use the NETGEAR Mobile app to set up the mobile router.

Use a Web Browser to Set Up the Mobile Router

To set up the mobile router:

1. Connect our computer to the mobile router WiFi network.

To view the mobile router WiFi network name, press the mobile router **Power** button to navigate through screens until the WiFi network name (SSID) displays.

Note You can also use a tethered connection to access the mobile router from a computer. For information about how to do this, see *Tethered Connection* on page 17.

- 2. Launch a web browser.
- 3. Enter http://192.168.1.1.

You are prompted to change the password for the admin user name and to change the WiFi name and WiFi password.

Note The default password for the admin user name is attadmin. We strongly recommend that you change this password to a more secure password.

4. Follow the onscreen instructions to set up your mobile router.

Use the Mobile App to Set Up the Mobile Router

To set up the mobile router:

1. Launch the NETGEAR Mobile app.

The app prompts you to change the password for the admin user name and to change the WiFi name and WiFi password.

Note The default password for the admin user name is attadmin. We strongly recommend that you change this password to a more secure password.

2. Follow the onscreen instructions to set up your mobile router.

Connect to the Mobile Router

2

This chapter covers the following topics:

- Connect to the Mobile Router Network
- Use the NETGEAR Mobile App to Access the Mobile Router
- Use a Web Browser to Access the Mobile Router

Connect to the Mobile Router Network

You can connect your computers and mobile devices to the mobile router WiFi network. You can also connect a computer to the mobile router through a tethered connection using the USB cable that came in the package with the mobile router.

Note If you set up your computer to use a static IP address, change the settings so that it uses Dynamic Host Configuration Protocol (DHCP).

WiFi Connection

You can find and select the WiFi network or you can connect to the router's WiFi network with Wi-Fi Protected Setup (WPS). For information about using WPS, see *Use WPS to Connect to the Mobile Router WiFi Network* on page 51.

To find and connect to the WiFi network:

- 1. Make sure that the mobile router is powered on (its LED is lit).
- Check to make sure that WiFi is enabled on your computer or mobile device and search for WiFi networks.
 See the following table or the manual for your WiFi-enabled device for further details on searching for WiFi networks.

Device	Instructions	
Windows computer	Click the Internet Access icon, which is usually found on the bottom right side of your screen.	
Mac computer	Go to the WiFi menu and select Network.	
Mobile devices Go to the Settings menu and tap the WiFi icon.		

- 3. Select the WiFi name that is displayed on your mobile router screen.
- **4.** Enter the WiFi password exactly as shown on the mobile router screen. The password is case-sensitive.

Your computer or mobile device connects to the WiFi network.

Tethered Connection



To connect the mobile router to the USB port on your computer:

Attach one end of the USB (type C) cable to the mobile router and plug the other end into the USB port on your computer.

Your computer automatically connects to the mobile router LAN (local area network). The first time you connect this way, your computer might display notifications about detecting a new device.

Note If you want to use data offloading with a tethered connection, use WiFi offloading instead of Ethernet offloading. Tethered access is not supported during Ethernet offloading. For more information about offloading, see *Offload Your Mobile Internet Connection* on page 30.

Use the NETGEAR Mobile App to Access the Mobile Router

You use the NETGEAR Mobile app to set up the mobile router. After initial setup, you can launch the app again and use it to log in to the mobile router to view or change its settings.

► To log in to the mobile router from the NETGEAR Mobile app:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.

You might be prompted to enter the admin password. During setup, you were prompted to change this password (the default password is **attadmin**).

3. If prompted, enter the admin password.



The app displays the following information:

- Notifications
- Data usage as provided by your carrier
- Your cellular and WiFi signals and battery
- Current WiFi band (swipeable)
- WiFi name and password
- Connected devices.
- 4. Swipe down.

The dashboard displays the icons shown in the following table.

Icon	Description	lcon	Description
<u>\$</u>	WiFi	<u></u>	Storage
(A)	Offloading	O	Security
Lů	Number of connected devices	*	Network Map
Ę	Messages	•	Settings
	Media	①	Power

Use a Web Browser to Access the Mobile Router

When you connect to the network (either with WiFi or with a tethered connection), you can use a web browser to access the mobile router to view or change its settings.

►To log in to the mobile router from a web browser:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login window opens.

3. Enter the router user name and password.

The user name is admin. The user name and password are case-sensitive.

Manage Battery Usage and Charging

3

This chapter includes the following sections:

- Extend Battery Life
- Recharge the Battery
- Use the Mobile Router to Jump Boost Another Device
- Change the LCD Screen Display
- Battery Tips
- General Battery Safety
- Appropriate Batteries and Chargers
- Battery Disposal

Extend Battery Life

The mobile router, by default, is configured to optimize battery life. If your mobile router is plugged in for an extended period of time, the mobile router automatically reduces charging levels to help protect battery life.

The following factors affect battery life:

- Standby time
- Data throughput
- Mobile broadband signal strength (the better the signal, the longer the battery life)
- WiFi range
- Dual-band WiFi (when all of your devices support 5 GHz WiFi, dual-band WiFi allows faster downloads but uses more power)
- Usage of a USB storage device
- Usage of an SD card

To extend the battery life, use any of the following methods:

- Adjust WiFi settings.
- · Adjust display settings.
- Remove the USB storage device.
- Remove the SD card.

Recharge the Battery

The battery comes partially charged. You can recharge the battery from a wall socket or from the USB port on your computer. Recharging from a wall socket is faster than recharging from a USB port.

Turn off USB tethering if you only want to charge your mobile router with your computer. For more information, see *Turn Off USB Tethering* on page 40.

Quick Charge the Battery


The mobile router supports Quick Charge 2.0 technology. You can charge the mobile router battery with a Quick Charge–certified power adapter, which charges the battery up to 75 percent faster than regular power adapters by increasing the charging power.

The current rating on the Quick Charge-certified power adapter must be greater than 1.5A.

Recharge the Battery From a Wall Socket

▶To recharge the battery from a wall socket:

1. Attach one end of the micro USB cable to the connector on the right on the mobile router and attach the other end to the wall charger (included).

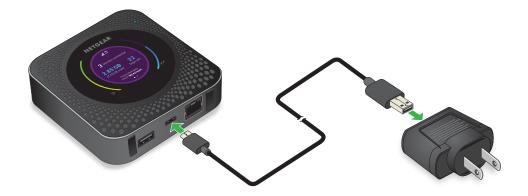

2. Plug the wall charger into a wall socket.

The Battery bar on the LCD indicates that the battery is charging.

Note The battery continues to charge when the mobile router is powered off.

If your battery does not charge, check the following:

- Is the mobile router hot? If you are in a low-coverage area, are transferring a lot of data, or left the
 mobile router in a hot location, the internal temperature of the mobile router can rise above 45°C.
 In these conditions, the battery cannot be charged due to safety limits with lithium-ion battery
 technology.
- Make sure that the USB cable and the AC wall charger are connected securely and are working correctly.
- If the wall socket is controlled by a switch, make sure that the switch is in the power-on position.

Recharge the Battery From a Computer USB Port

► To recharge the battery from the USB port on your computer:

Attach one end of the micro USB cable to the mobile router and plug the other end into the USB port on your computer.



The Battery bar on the LCD indicates that the battery is charging.

Note The LCD goes into sleep mode after a set time to extend battery life. To wake up the LCD, press and quickly release the **Power** button.

Use the USB Type C Cable to Charge Only

You can log in to the mobile router and specify a setting so that the USB type C cable is used only for charging and not to access the mobile router using a web browser. You might want to do this if you are using the Ethernet port and a wall socket is not available to charge the mobile router.

► To specify a USB type C cable charge-only setting:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login window opens.

3. Enter the router user name and password.

The user name is admin. The user name and password are case-sensitive.

The mobile router dashboard displays.

4. Select Setup > Router Setup.

The Router Setup page displays.

5. In the TETHERING section, select Charge only.



Your settings are saved. When you connect the USB type C cable, the mobile router battery charges, but you cannot use the tethered connection to access the mobile router with a web browser.

Use the Mobile Router to Jump Boost Another Device

If your smartphone or other device is low on or out of battery power, you can give it a boost by connecting it to the mobile router's USB port A connector.



Figure 4. Jump boost begins automatically once the devices are connected

Change the LCD Screen Display

You can change the brightness and the time-out for the LCD.

Change the LCD Screen Time-Out and Brightness From the NETGEAR Mobile App

▶To change the LCD screen time-out and brightness:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

4. Tap Settings.

The Settings page displays.

- 5. To change the screen time-out, select the number of minutes for the screen time-out.
- **6.** To change the screen brightness, move the slider.

Change the LCD Screen Time-Out and Brightness From a Web Browser

To change the screen time-out:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Advanced Settings > Device.

The Device page displays.

- 5. To change the screen time-out, select the number of minutes for the screen time-out.
- **6.** To change the screen brightness, move the slider.
- 7. Click the Apply button.

Your settings are saved.

Battery Tips

The following tips explain best practices for battery usage and care:

- Charge batteries in a room-temperature environment, which is generally between 68°F and 79°F (20°C and 26°C). Charging might be temporarily disabled if the battery temperature exceeds 113°F (60°C). If the battery temperature is hot, but less than 113°F (60°C), the battery charges, but at a slower rate than usual.
- If a battery exhibits significantly shorter runtime or discharge capacity compared to when it was new, it reached the end of its reasonable lifetime. Consider replacing it.
- If a battery does not charge or exhibits excessive charging time, it is possible that it reached the end of
 its life and might need to be replaced.
- All batteries degrade and lose charge capacity over time as a result of use or storage and must eventually be replaced.
- Batteries are best stored in a cool, dark, dry place. Avoid storage in direct sunlight and in vehicles parked outdoors.
- Batteries might get warm while charging and discharging. This is normal behavior for all batteries.
- Use the AC adapter and the USB cable that came with this device.
- Use the latest firmware. Check for updates on a regular basis.
- Device performance and runtime are affected by workload or usage. Higher workloads or usage can lead to higher battery temperatures and faster battery power consumption.
- Streaming large amounts of data affects the power consumption and reduces the operating time of the battery.

General Battery Safety

Observe the following guidelines:

- Stop using a battery if its case appears damaged, swollen, or compromised. Examples include, but are not limited to, leaking, odors, dents, corrosion, rust, cracks, swelling, melting, and scratches.
- Do not expose batteries to fire or other heat generating environments.
- Do not place the battery or the device in areas that might get hot. Examples include, but are not limited to, on or near a space heater, cooking surface, cooking appliance, iron, radiator, or fireplace.
- Do not get the battery or the device wet. Even though it might dry and appear to operate normally, the circuitry can slowly corrode and defeat its safety circuitry.
- Do not crush, puncture, deform, or put a high degree of pressure on the battery, which can cause an internal short circuit, resulting in overheating.
- Avoid dropping the battery or the device. Dropping it, especially on a hard surface, might cause damage
 to the battery and the device. If you suspect damage to the battery or the device, replace it.
- When the battery is outside the device, do not allow the battery to come in contact with metal objects, such as coins, buttons, jewelry, or tools.
- Do not disassemble or modify batteries. Do not use a battery for anything other than its intended purpose.

Appropriate Batteries and Chargers

Observe the following guidelines:

- Use only approved batteries in the device. Purchase only products and accessories recommended by NETGEAR or your carrier. Use of unapproved batteries, products, or accessories will void your warranty.
- Do not use incompatible batteries and chargers. Some websites and second-hand dealers, not associated
 with reputable manufacturers and carriers, might sell incompatible or even counterfeit batteries and
 chargers.
- If you are unsure about whether a replacement battery or charger is compatible, contact NETGEAR.
- Quick Charge 2.0—enabled devices must be paired with Quick Charge 2.0—certified adapters.

Battery Disposal

Follow disposal regulations in your region, and handle batteries safely. Observe the following guidelines:

- Disposal regulations vary by region. Dispose of old batteries and equipment in compliance with your local regulations.
- Proper disposal might include recycling programs for batteries, cell phones, or other electronic waste.
- Do not dispose of batteries in a fire.

Manage Your Internet Connection

4

This chapter explains how to manage your mobile router Internet connection.

The chapter covers the following topics:

- View Your Data Usage on page 29
- Offload Your Mobile Internet Connection on page 30
- Specify Cellular Settings on page 33
- Enable VPN Service on page 35

View Your Data Usage


You can view an estimate of your data usage on the mobile router LCD, from the NETGEAR Mobile app, and on the mobile router web page.

To find out how to manage your data, visit att.com/myATT.

View Data Usage on the Mobile Router LCD

► To view estimated data usage on the mobile router LCD:

To wake the device, press the **Power** button.

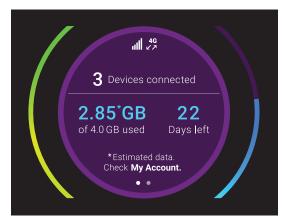

The LCD shows the estimated data usage for the current billing cycle (2.85GB out of 4.0GB in the previous figure).

Note If you use a prepaid SIM card, the LCD displays data usage in a different way.

View Data Usage From the NETGEAR Mobile App

- ► To view estimated data usage from the NETGEAR Mobile app:
 - 1. On your smartphone, connect to the mobile router's WiFi network.
 - 2. Launch the NETGEAR Mobile app.



The app shows the estimated data usage for the current billing cycle.

View Data Usage From a Web Browser

You can log in to the mobile router from a computer using a web browser.

- ►To view estimated data usage information on the mobile router web page:
 - 1. From a computer that is connected to your network, launch a web browser.
 - 2. Enter http://192.168.1.1.
 - A login page displays.
 - 3. Enter the administrator login password.
 - The password is case-sensitive.

The mobile router dashboard displays the estimated data usage in the right pane.

4. To view more details, click the CHECK MY ACCOUNT link.

Offload Your Mobile Internet Connection

Data offloading lets you transfer the mobile router's Internet connection from mobile broadband to another WiFi or Ethernet connection. Data offloading reduces the amount of data that you are using on the cellular

band. You might want to use this feature if you are in an area in which many others are using cellular connections at the same time or in areas with poor cellular reception.

During Ethernet offloading, you can use the micro USB port for AC charging and you can use the USB type A port to jump boost a device or to connect a USB device



Figure 5. Ethernet offloading with AC charging and a USB storage device

If you want to use a tethered connection and offload, use WiFi offloading. If you do use WiFi offloading, you must configure the mobile router for 2.4 GHz access only. Dual-band access is not supported for WiFi offloading.

You cannot use an Ethernet connection and a tethered connection at the same time



Figure 6. Tethered access is not supported during Ethernet offloading

Enable Data Offloading From the NETGEAR Mobile App

▶ To enable data offloading from the NETGEAR mobile app:

- 1. Launch the NETGEAR Mobile app on your smartphone.
- Swipe down.The dashboard displays.
- Tap Offloading.
 The Offloading page displays.
- Select WiFi.
 The Offloading page displays a list of WiFi networks in your area.
- 5. To connect to a network on the list, do the following:

- a. Tap a WiFi network.
- b. When prompted, enter the password for the WiFi network and tap CONNECT.
- 6. To join another WiFi network that is not in the list, do the following:
 - a. Tap Join Network.
 - **b.** When prompted, type the network name and the password.
 - c. Tap CONNECT.
- **7.** To offload to a preferred network, do the following:
 - a. Tap Preferred Networks.

A list of preferred networks displays.

- **b.** Select the network and enter the password.
- c. Tap CONNECT.

When the hotspot is offloading the Internet connection, the WiFi icon displays the signal strength. The screen displays the SSID of the active WiFi network.

Enable WiFi Data Offloading From a Web Browser

To enable WiFi data offloading:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Setup > Data Offloading.

The Data Offloading page displays.

- 5. Select the Enable check box.
- 6. Select the WiFi radio button.

By default, the **Ethernet** radio button is selected.

7. Click the Apply button.

Your settings are saved.

- 8. Click the Scan Network button.
- 9. From the menu, select the WiFi network.

- 10. When prompted, enter the WiFi password.
- 11. Click the Continue button.

The WiFi network is added to the list of preferred networks.

Enable Ethernet Data Offloading From a Web Browser

▶To enable Ethernet data offloading:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Setup > Data Offloading.

The Data Offloading page displays.

- 5. Select the **Enable** check box.
- 6. Select the Ethernet radio button.

By default, the **Ethernet** radio button is selected.

7. Click the Apply button.

Your settings are saved.

Specify Cellular Settings

You can specify cellular network settings for the mobile router.

Specify Cellular Settings From the NETGEAR Mobile App

To specify cellular settings:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

- Tap Settings.
- 5. Tap Cellular.

The Cellular page displays. Domestic Data is selected by default.

6. To turn domestic data on and off, tap Domestic Data.

- 7. To turn roaming on and off, tap International Roaming.
- 8. To add an APN, do the following:
 - Tap APN.
 - **b.** Tap +.

The Add a new APN page displays.

- c. Complete the settings.
- d. Tap Add.

The APN is added.

Specify Cellular Settings From a Web Browser

To specify cellular settings:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.


A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.


The dashboard displays.

4. Select SETTINGS > Advanced Settings > Cellular.

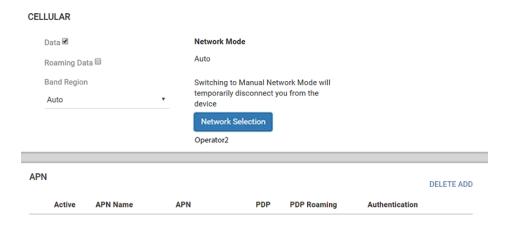

- 5. Change the settings as needed.
- **6.** To add an Access Point Name (APN) with its profile settings, do the following:

a. Click the ADD button

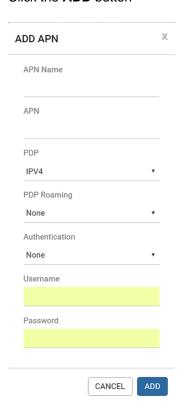

- b. Complete the fields.
- c. Click the ADD button.The Cellular page displays the APN.
- d. To make this APN the active APN, click the radio button next to the APN name.
- e. Click the SAVE button.

The APN is now the active APN. The Cellular Settings page also displays a check box next to the new APN name. This check box lets you select the APN so that you can delete it.

Note The page does not display a check box next to the default APN name because you cannot delete that APN.

7. Click the Apply button.

Your settings are saved.

Enable VPN Service

To connect to a corporate network using VPN, you must first enable VPN service.

Enable VPN Service From a Web Browser

► To enable VPN service:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

- 4. Select SETTINGS > Advanced Settings > Other.
- 5. Select the VPN Service Enable check box.
- 6. Click the Apply button.

Your settings are saved.

Control Internet Access

The router comes with a built-in firewall that helps protect your home network from unwanted intrusions from the Internet.

This chapter includes the following sections:

- Set Up Parental Controls on page 38
- Access Control on page 39
- Turn Off USB Tethering on page 40
- Manage Website Filters on page 41
- Set Up a Schedule for Internet Access on page 42
- Enable SIM Security on page 44
- Enable Port Forwarding on page 45
- Set Up Port Filtering on page 46
- Enable DMZ on page 46

Set Up Parental Controls

The first time that you select **Parental Controls**, your browser goes to the Live Parental Controls website, where you can learn more about parental controls and download the application.

After you set up and enable parental controls, you can change the web filtering level for each device on the network through the network map page on the genie app.

To set up parental controls:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Security > Parental Controls.

The Parental Controls page displays.

5. Select the **Enable** check box.

Because Live Parental Controls uses free OpenDNS accounts, you must log in or create a free account.

- 6. Log in to your OpenDNS account:
 - If you already own an OpenDNS account, log in to your account.
 - If you do not own an OpenDNS account, click the Sign Up link to create a new account a log in.
- 7. Select a filtering level.
- 8. To create a list of unrestricted devices, do the following:
 - **a.** In the Unrestricted Devices section, click the **ADD** button.
 - **b.** Select the device.

The device is added to the list.

9. Click the Apply button.

Your settings are saved.

Access Control

You can use access control to set up a list of devices to be blocked from accessing the mobile router or to be allowed access.

Set Up Access Control From the NETGEAR Mobile App

To set up access control:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

4. Tap Devices.

The Devices page displays.

5. Tap Block List or Allow List.

Depending on your selection, the page displays an Allow List or a Block List.

- 6. To turn blocking on or off, tap the Block all in list slider.
- 7. To turn an allow list on or off, tap the **Allow only in list** slider.
- 8. To add a device to the list, tap + and select the device.

The device is added to the list.

9. To remove a device from the list, select the device and then tap the trash can.

The device is removed from the list.

Set Up Access Control From a Web Browser

To set up access control:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Security > Access Control.

The Access Control page displays.

- 5. Select the Enable check box.
- 6. In the Filter Type menu, select Allow List or Block List.

Depending on your selection, the page displays an Allow List or a Block List.

- To add a device to the list, click the ADD button and select the device.The device is added to the list.
- **8.** To remove a device from the list, select the device and then click the **DELETE** button. The device is removed from the list.

Turn Off USB Tethering

USB tethering lets you connect to the Internet from supported computers with a USB cable and charge the mobile router battery at the same time.



Figure 7. Mobile router tethered to a laptop computer

Turn off USB tethering if you only want to charge your mobile router with your computer.

Turn Off USB Tethering From the NETGEAR Mobile App

To turn off tethering:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

Tap Settings.

The Settings page displays.

5. Tap General.

The General page displays.

6. Under ROUTER, tap **Tethering** to toggle between Charge only and Charge + tether.

Turn Off USB Tethering From a Web Browser

To turn off tethering:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Setup > Router Setup.

The Router Setup page displays.

- 5. In the Use USB port for section, select Charge only.
- 6. Click the Apply button.

Your settings are saved.

Manage Website Filters

You can set up a filter to block or allow access to websites that you specify. You can also set up a list of devices that are unrestricted. The website filtering does not apply to unrestricted devices.

To set up a website filter:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Security > Website Filters.

The Website Filters page displays.

- 5. Select the Enable check box.
- 6. In the Filter Type menu, select Block List or Allow List.

Depending on your selection, a Blocked Websites list or an Allowed Websites list displays.

7. To add a website to the list, click the ADD button and enter the website.

The website is added to the list.

8. To edit an entry in the list, do the following:

- a. Select its check box.
- b. Click the **Edit** icon.
- c. Enter the changes.
- To remove a website from the list, select its check box and then click the **DELETE** button.The website is removed from the list.
- 10. To create a list of unrestricted devices, do the following:
 - a. In the Unrestricted Devices section, click the ADD button.
 - **b.** Select the device.

The device is added to the list.

11. Click the Apply button.

Your settings are saved.

Set Up a Schedule for Internet Access

▶To set up a schedule for Internet access:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Security > Schedule.

The Schedule page displays.

- 5. Select the Enable check box.
- 6. To add a schedule rule, click the Add button.

The NEW RULE page displays.

- 7. Specify the name of the rule and the days and times for the rule.
- 8. Click the **SAVE** button.

Your settings are saved.

Edit a Schedule Rule

To edit a schedule rule:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select **SETTINGS** > **Security** > **Schedule**.

The Schedule page displays.

5. Click the FEdit icon.

The EDIT RULE page displays.

- 6. Change the settings.
- 7. Click the **SAVE** button.

Your settings are saved.

Delete a Schedule Rule

To delete a schedule rule:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Security > Schedule.

The Schedule page displays.

- 5. Select the check box for the rule.
- 6. Click the **DELETE** button.

The rule is deleted.

Enable SIM Security

If you enable SIM security, you must enter a SIM PIN each time you power on the mobile router.

Enable SIM Security From the NETGEAR Mobile App

To enable SIM security:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

4. Tap Security.

The Security page displays.

5. Tap SIM Security.

The SIM Security page displays.

6. Tap ACTIVATE.

The Enter SIM Security page displays.

- 7. Enter a PIN.
- 8. Tap OKAY.

Your settings are saved.

If you enter an incorrect PIN three times, the SIM is blocked. If the SIM is blocked, contact your network service provider to receive a PUK number to unblock the SIM.

Enable SIM Security From a Web Browser

To enable SIM security:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select **SETTINGS > Network > SIM Security**.

The SIM Security page displays.

5. Click the ACTIVATE button.

- 6. Enter your PIN.
- 7. Click the **Apply** button.

If you enter an incorrect PIN three times, the SIM is blocked. If the SIM is blocked, contact your network service provider to receive a PUK number to unblock the SIM.

Enable Port Forwarding

Port forwarding is an advanced feature. If your computer is hosting a server, you can enable port forwarding so that other users can access the server.

Note Port forwarding creates a security risk. When not required, disable port forwarding.

To enable port forwarding:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select **SETTINGS** > Router > Port Forwarding.

The Port Forwarding page displays.

5. Select the **Enable** radio button.

The Port Forwarding list displays.

Incoming traffic is forwarded to specific ports and devices on your network using their local IP addresses.

6. To add a port forwarding address, click the ADD button.

The ADD SERVICE page displays.

- **7.** Enter the following port forwarding information:
 - Rule Name. Enter a descriptive name.
 - IP Address. Enter the IP address of the connected device.
 - Port. Enter the port number that the application uses.
 - Protocol. If you are unsure, select TCP.
- 8. Click the ADD button.

Your settings are saved.

Set Up Port Filtering

You can select which applications (for example, HTTP, FTP, email servers) can access the Internet. Used with other security measures such as a firewall, port filtering can enhance network security.

To set up port filtering:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Router > Port Filtering.

The Port Filtering page displays.

5. Select the **Enable** check box.

The Filter Type menu displays.

6. Select Block List or Allow List.

The ADD SERVICE page displays.

- **7.** Enter the following port forwarding information:
 - Service Name. Enter a descriptive name.
 - Port. Enter the port number that the application uses.
 - Protocol. If you are unsure, select TCP.
- 8. Click the ADD button.

Your settings are saved.

Enable DMZ

In a demilitarized zone (DMZ) network configuration, a computer runs outside the firewall in the DMZ. This computer intercepts incoming Internet traffic, providing an extra layer of protection for the rest of the network, and sending all incoming data to a particular IP address.

►To enable the DMZ and designate a computer to screen incoming traffic:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select **SETTINGS > Advanced > Other**.

The Other page displays.

- 5. Select the **Enable** check box.
- 6. In the **DMZ Address** field, enter the IP address of the computer to which you want all data sent. If the mobile router is tethered using a USB cable, this address is 192.168.1.4. If the mobile router is connected using WiFi, the first WiFi client's IP address is usually 192.168.1.74.
- 7. Click the Apply button.

Your settings are saved.

Specify Mobile Router Network Settings



This chapter provides information about how to configure various aspects of the mobile router such as WiFi settings, WAN settings, and router settings. The chapter covers the following topics:

- Select a WiFi Profile on page 49
- Manage WiFi Settings on page 50
- Use WPS to Connect to the Mobile Router WiFi Network on page 51
- Universal Plug-N-Play on page 52
- Enable IP Pass-Through Mode on page 53
- Specify the IP Addresses That the Mobile Router Assigns on page 54
- Disable the DHCP Server Feature in the Mobile Router on page 54

Select a WiFi Profile

You can view or change the mobile router WiFi settings. The following WiFi profiles are available:

- Dual-band WiFi (2.4 GHz and 5 GHz). Connect 2.4 GHz and 5 GHz devices to transfer data at higher throughputs.
- 2.4 GHz WiFi. Use only the 2.4 GHz WiFi band.
- 5 GHz WiFi. Use only the 5 GHz WiFi band.
- **Turn Off WiFi**. This turns off the WiFi signal from the mobile router. With this setting, you can only connect to the mobile router with a tethered USB connection.

Note When you change WiFi settings, any devices connected to the mobile router are disconnected and might need to be reconnected.

Select a WiFi Profile From the NETGEAR Mobile App

To select a WiFi profile:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

- Tap Settings.
- 5. Tap WiFi.
- 6. Tap WiFi Profiles.

The WiFi Profiles displays.

- 7. Tap a WiFi network to select it.
- 8. Tap SAVE.

Your settings are saved.

Select a WiFi Profile From a Web Browser

To select a WiFi profile:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Setup > WiFi Profiles.

The WiFi Profiles page displays.

- 5. Select the **Enable** button for the WiFi profile that you want to use.
- 6. Click the Apply button.

The selected WiFi profile is activated.

Manage WiFi Settings

Note When you change WiFi settings, any devices connected to the mobile router are disconnected and might need to be reconnected.

Specify WiFi Settings From the NETGEAR Mobile App

► To specify the WiFi settings from the NETGEAR Mobile app:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

4. Tap WiFi.

The WiFi page displays.

Change the settings.

Your settings are saved.

Specify WiFi Settings From a Web Browser

▶To select a WiFi profile or create a custom profile on the mobile router web page:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Setup > Wireless.

The Wireless Network page displays the settings for the 2.4 GHz and the 5 GHz WiFi bands and global WiFi settings.

5. Change the settings as needed.

By default, the **Broadcast WiFi Name SSID** check box is selected for each network so that the WiFi network name displays in the list of WiFi networks for computers or mobile devices.

- 6. To change the global WiFi settings, adjust the WiFi standby time or the WiFi range.
- 7. Click the **Apply** button.

Your settings are saved.

When you change your profile options (including disabling or enabling either WiFi network), any devices connected to the mobile router are disconnected and might need to be reconnected.

Use WPS to Connect to the Mobile Router WiFi Network

To connect to the mobile router WiFi network, you can find the network and connect or you can use WPS. If the device is WPS enabled, you can use the WPS method to connect the device without using the WiFi password.

Use WPS From the NETGEAR Mobile App

To add a WPS-enabled WiFi device from the NETGEAR Mobile app:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

4. Tap WiFi.

The WiFi page displays.

- 5. Tap WPS.
- 6. Within two minutes, tap or click the **WPS** button on the mobile device or computer that you want to connect.

Your mobile router and the mobile device or computer communicate and establish the connection.

Use WPS From a Web Browser

► To add a WPS-enabled WiFi device from the mobile router web page:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select Wireless.

The Wireless page displays.

5. Click the **WPS** button for the network.

The WPS page displays.

- 6. Choose the WPS method that you want to use:
 - WPS button pairing. If the device that you want to connect includes a WPS button, click the WPS button pairing button and, within two minutes (120 seconds), press the device's WPS button.
 - Enter WPS PIN. If a WPS pin is associated with the device that you want to connect, click the Enter WPS PIN button and enter the device's WPS PIN.

Your mobile router and the wireless device communicate and establish the connection.

Universal Plug-N-Play

Universal Plug N Play (UPnP) helps devices, such as Internet appliances and computers, access the network and connect to other devices as needed. UPnP devices can automatically discover the services from other registered UPnP devices on the network. UPnP is beneficial when you use applications such as multiplayer gaming, peer-to-peer connections, or real-time communications such as instant messaging or remote assistance. By default, UPnP is enabled in the mobile router.

Turn UPnP Off or On From the NETGEAR Mobile App

By default, UPnP is enabled in the mobile router, but you can disable and enable this feature.

To disable or enable UPnP:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

4. Tap Settings.

The Settings page displays.

5. Tap General.

The General page displays.

6. Tap the Enable UPnP slider.

UPnP toggles off or on.

Turn UPnP Off or On From a Web Browser

By default, UPnP is enabled in the mobile router, but you can disable and enable this feature.

To disable or enable UPnP:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Advanced Settings > Other.

The Router Settings page displays.

5. Select the UPnP **Disable** or **Enable** button.

UPnP toggles off and on.

6. Click the Apply button.

Your settings are saved.

Enable IP Pass-Through Mode

To turn off the mobile router functionality and assign the network IP address directly to the attached device, enable IP pass-through.

If you make this change, the attached device restarts using a different driver configuration.



WARNING:

If you enable this feature, WiFi is disabled and you must use a USB cable to tether the device.

Note This feature is available to Windows computer users. If you are a Mac user, do not enable this option because you will be unable to access your device.

To enable IP pass through mode:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select **SETTINGS** > **Setup** > **Router Setup**.

The ROUTER SETUP page displays.

5. Select the IP PASSTHROUGH ON button.

The default selection is AUTO.

Specify the IP Addresses That the Mobile Router Assigns

By default, the router acts as a Dynamic Host Configuration Protocol (DHCP) server. The router assigns IP, DNS server, and default gateway addresses to all computers connected to the LAN. The assigned default gateway address is the LAN address of the router.

These addresses must be part of the same IP address subnet as the router's LAN IP address. Using the default addressing scheme, define a range between 192.168.1.2 and 192.168.1.254, although you can save part of the range for devices with fixed addresses.

► To specify the pool of IP addresses that the mobile router assigns:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select **SETTINGS** > **Setup** > **Router Setup**.

The ROUTER SETUP page displays.

- 5. Enter the starting IP address and the ending IP address.
- 6. Click the Apply button.

Your settings are saved.

Disable the DHCP Server Feature in the Mobile Router

By default, the mobile router acts as a DHCP server. The router assigns IP, DNS server, and default gateway addresses to all computers connected to the LAN. The assigned default gateway address is the LAN address of the router.

You can use another device on your network as the DHCP server, or specify the network settings of all your computers.

► To disable the DHCP server feature in the mobile router:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select **SETTINGS > Setup > Router Setup**.

The ROUTER SETUP page displays.

- 5. Clear the Use NETGEAR Mobile as DHCP server check box.
- 6. Click the Apply button

Your settings are saved.

7. (Optional) If this service is disabled and no other DHCP server is on your network, set your computer IP addresses manually so that they can access the mobile router.

Share Media and Storage

7

You can use the mobile router to share media and storage devices. The mobile router supports MyMedia on mobile devices. You can insert a USB storage device in the mobile router USB type A port and you can install a micro SD card in the mobile router.

The chapter includes the following sections:

- Manage Shared Storage Devices on page 57
- Install a Micro SD Card on page 58
- View Storage Device Usage and Capacity on page 59
- Manage Files on the Mobile Router on page 59
- Play Media on page 61

Manage Shared Storage Devices

You can insert a USB storage device in the mobile router USB type A port and you can install a micro SD card in the mobile router. You can access the files and folders on these devices from computers and mobile devices that are connected to the mobile router network.

USB Device Requirements

The mobile router works with most USB-compliant external flash and hard drives. Some USB external hard drives and flash drives require you to load the drivers onto the computer before the computer can access the USB device. Such USB devices do not work with the mobile router.

The mobile router supports the following file system types for full read/write access: FAT16, FAT32, NTFS, HFS, and HFS+.

When you purchase a USB storage device, the package typically identifies its format. For information about how to format a USB storage device using a Windows or Mac computer, consult the help instructions for your computer or operating system. You might need to use a specific application to format a USB storage device.



CAUTION:

Formatting a USB storage device erases all its content.

Connect a USB Storage Device

You can access and share a USB storage device connected to the mobile router USB type A port. (If your storage device uses special drivers, it is not compatible.) You can continue use the micro USB port to charge the mobile router or for a tethered connection.



Figure 8. USB storage and tethering connections

To connect a USB storage device:

- 1. Insert your USB storage drive into a USB port on the router.
- If your USB device uses a power supply, connect it.You must use the power supply when you connect the USB device to the router.

When you connect the USB device to the router USB port, it might take up to two minutes before it is ready for sharing.

Micro SD Card Requirements

The mobile router supports SD cards up to 128 GB in the following formats: FAT, FAT-16, FAT-32, NTFS, HFS, and HFS+.

Note For information about how to format a USB storage device using a computer or other device, consult the instructions that came with your computer or device.

Formatting the USB storage device erases all data on the device.

Install a Micro SD Card

Micro SD cards are sold separately.

▶To install the micro SD card:

- 1. Obtain a micro SD card (sold separately).
- 2. Make sure that power to the mobile router is off.
- Remove the cover on the bottom of the mobile router.Place your thumbs on the arrows on the cover and press down while sliding the cover up.



Number	Description
1	Micro SD card slot
2	Enlargement of the micro SD card slot

Insert the micro SD card into the micro SD slot. Replace the mobile router cover.

View Storage Device Usage and Capacity

You can view the storage capacity for a USB storage device attached to the mobile router and a micro SD card installed in the mobile router.

► To view storage device capacity and usage:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

4. Tap Tap Storage.

The Storage page displays the used and available storage for each connected device.

Manage Files on the Mobile Router

You can manage files on the mobile router by using a web browser, the NETGEAR Mobile app, or a desktop application such as Windows File Explorer or MacOS Finder.

Upload Media Files to Mobile Router Storage

You can upload media files to either a micro SD card or a USB storage device connected to the mobile router. Micro SD cards and USB drives are sold separately.

To upload media files onto a storage device:

1. Insert the storage device into the mobile router.

You can install a micro SD card and you can attach a USB storage device to the USB port. If your USB device uses a power supply, connect it. You must use the power supply when you connect the USB device to the router.

- 2. From a computer that is connected to your network, launch a web browser.
- 3. Enter http://192.168.1.1.

A login page displays.

4. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

- 5. Click the **MyMedia** tab.
- 6. Drag and drop your files on to the page.

Use the NETGEAR Mobile App to Manage Files on the Mobile Router

► To use the NETGEAR mobile app to manage files on the mobile router:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

- 4. Tap MyMedia.
- 5. Take one of the following actions:
 - To access an SD card that is inserted in the mobile router, tap All Files on SD Card.
 - To access a USB storage drive that is connected to the mobile router, tap All Files on USB.

You can now manage files on the SD card or the USB storage device.

Use Windows File Explorer to Manage Files on the Mobile Router

You can manage files on the mobile router by using Windows File Explorer.

► To use Windows File Explorer to manage files on the mobile router:

- 1. On your Windows-based computer, connect to the mobile router's WiFi network.
- 2. Open Windows File Explorer.
- 3. Enter \\192.168.1.1.
- 4. Take one of the following actions:
 - To access an SD card that is inserted in the mobile router, navigate to mymedia\card.
 - To access a USB storage drive that is connected to the mobile router, navigate to mymedia\usb.

You can now manage files on the SD card or the USB storage device.

Use MacOS Finder to Manage Files on the Mobile Router

You can manage files on the mobile router by using MacOS Finder.

▶ To use MacOS Finder to manage files on the mobile router:

- 1. On your Mac computer, connect to the mobile router's WiFi network.
- 2. Open Finder.
- 3. From the main menu, select Go > Connect to Server.

A pop-up window opens.

- 4. In the Server Address field, enter smb://192.168.1.1
- 5. Click the Connect button.

You can now navigate to and manage files on an SD card that is inserted in the mobile router or on a USB storage device that is connected to the mobile router.

Play Media

The NETGEAR Mobile app includes a MyMedia shortcut that displays categories of supported media types to play back. You can connect any DLNA-compatible client to the mobile router. This includes computers running Windows Media Player and other DLNA-enabled devices such as smart TVs.

▶ To play media using the NETGEAR Mobile app:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

4. Tap **Storage**.

The Storage page displays the used and available storage for each connected device.

5. Tap MyMedia.

The MyMedia shortcut displays categories of supported media types to play back.

6. Select the media to play.

You are prompted to select an app on which to play your media.

7. Select the app on which to play the media.

The media plays on the selected app.

Manage Your Mobile Router Network

This chapter describes the router settings for administering and maintaining your router and home network. The chapter includes the following sections:

- View the Network Status on page 63
- View Mobile Router Device Status on page 63
- View WiFi Details on page 64
- View a Network Map on page 64
- View Connected Devices on page 65
- Update the Mobile Router Firmware on page 66
- Change the admin Password on page 67
- Manage SMS Messages on page 68
- Manage the LED Settings on page 69
- Back Up and Restore the Mobile Router Settings on page 69
- Factory Reset on page 71
- Reboot the Mobile Router on page 72
- Power Off the Mobile Router on page 73
- View Details About Your Mobile Router on page 74

View the Network Status

To view the network status:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Mobile Router Status > Account.

The Network Status page displays.

View Mobile Router Device Status

You can view details about the status of your modem router.

View Mobile Router Device Status From the NETGEAR Mobile App

To view device status:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

Tap Settings.

The Settings page displays.

5. Tab About.

The About page displays.

View Mobile Router Device Status From a Web Browser

➤ To view device status:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select Settings > Mobile Router Status > Device.

The Device Status page displays.

View WiFi Details

To view WiFi status:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Mobile Router Status > WIFI DETAILS.

The WIFI DETAILS page displays.

View a Network Map

The network map shows the status of your mobile router network and your Internet connection.

View a Network Map From the NETGEAR Mobile App

To view a network map:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

4. Tap **Metwork Map**.

The network map displays.

View a Network Map From a Web Browser

To view a network map:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays a network map.


View Connected Devices

You can view a list of devices that are connected to your mobile router.

View the Connected Devices On the LCD

▶To view the connected devices from the LCD:

To wake the device, press the Power button.

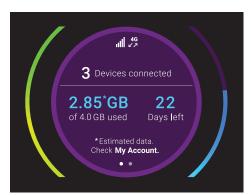

The screen shows the number of connected devices.

View the Connected Devices From the NETGEAR Mobile App

To view the connected devices from the NETGEAR Mobile app:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

4. Tap Connected Devices.

A list of connected devices displays.

View the Connected Devices From a Web Browser

► To view the connected devices from the mobile router web page:

- From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

A list of devices connected to the WiFi network displays on the dashboard.

If you notice a WiFi device that you do not recognize, you can block that device from connecting to your WiFi network.

Update the Mobile Router Firmware

The mobile router automatically checks for new firmware updates. If an update becomes available, the mobile router displays an alert. You can also check for updates manually without receiving an alert.

Update Firmware From an Alert

To update the firmware:

- 1. Open the alert.
- 2. Click the **Download** button.

When the download completes, the mobile router displays an alert with an **Install now** button.

3. Click the **Install now** button.

The update installs. The mobile router reboots automatically and uses the new software.

Update Firmware From the NETGEAR Mobile App

▶ To update firmware using the NETGEAR Mobile app:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

- Tap Settings
- 5. Tap Firmware.

The Firmware page displays.

6. Tap CHECK FOR UPDATE.

The mobile router checks for firmware updates. If an updated is available, it is automatically downloaded.

7. Tap INSTALL UPDATE.

After the update install completes, a success message displays.

Update the Firmware From the Web Page

To update firmware using the mobile router web page:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays. If a firmware update is available, a blue **INSTALL NEW FIRMWARE** link displays on the right.

4. Click the INSTALL NEW FIRMWARE link.

The update downloads.

5. Follow the onscreen instructions to install the update.

After the update completes, the mobile router reboots.

Change the admin Password

The admin password is used to log in to the mobile router with the user name admin. This password is not the one that you use for WiFi access.

When you used the NETGEAR Mobile app to set up the mobile router, you changed the admin password. To change it again, you must use web browser access from a computer. The ideal password contains no dictionary words from any language and contains uppercase and lowercase letters, numbers, and symbols.

To change admin password:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Administration > Set Password.

The Set Password page displays.

- 5. Enter your current password in the Old Password field.
- Enter your new password in the New Password field and the Repeat Password field. Your settings are saved.

Manage SMS Messages

You can view messages from the NETGEAR Mobile app or the mobile router web page.

Manage Messages From the NETGEAR Mobile App

▶To manage SMS messages from the NETGEAR Mobile app:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

4. Tap Messages.

The Messages page displays.

- 5. To read the full text of a message, tap the message.
- To delete a message, tap and hold the message to select it, and then tap the **Delete** button. The message is deleted.

View or Delete Messages From a Web Browser

▶To view or delete SMS messages from the mobile router web page:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays a list of messages, showing the first portion of the text.

- Click a message to read the full text.
- To delete a message, click the message and then click the **Delete** button. The message is deleted.

Manage the LED Settings

You can turn the LED blinking off and on.

►To turn the LED blinking on or off:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. In the upper right corner, click the **menu** icon.

The menu opens.

5. Select LED Settings.

The LED Settings page displays.

- 6. Select the Enable LED blinking or Disable LED blinking radio button.
- 7. Click the Apply button.

Your settings are saved.

Back Up and Restore the Mobile Router Settings

You can back up and restore mobile router settings. Backing up and restoring is useful if you use more than one device and you want the same settings on all of your devices. You can also save your settings before resetting to factory defaults or changing the settings.

Back Up the Mobile Router Settings

To back up mobile router settings:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Administration > Backup.



5. Click the **BACKUP Settings** button.

By default, the file (export.cfg) is saved to your Downloads folder.

Restore the Mobile Router Settings

▶To restore mobile router settings:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select **SETTINGS** > **Administration** > **Backup**.



- **5.** Select the export.cfg file to restore using one of the following methods:
 - To browse and select a local file, click the Choose File button.
 - To select a backup file from the network, click the UPLOAD button.

By default, mobile router setting files are saved to your Downloads folder.

6. Click the Open button.

Your mobile router is restored with the imported file settings.

Factory Reset

You can return the mobile router to its factory settings.

Factory Reset From the NETGEAR Mobile App

►To reset the mobile router and return it to its factory settings:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

- 4. Tap C Settings
- 5. Tap Firmware.

The Firmware page displays.

- 6. Tap PERFORM FACTORY RESET.
- 7. Tap YES.

The mobile router resets and returns to its factory settings.

Factory Reset From a Web Browser

To perform a factory reset:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Administration > Factory Reset.

The Factory Reset page displays.

- 5. Click the Factory Reset button.
- 6. When prompted, click the Yes button to confirm.

The mobile router resets and returns to its factory settings.

Factory Reset Using the Reset Button

You must remove the cover on the bottom of the mobile router to access the Reset button.

▶ To perform a factory reset using the Reset button:

- 1. Make sure that the mobile router LED is lit to indicate that it is receiving power from the battery.
- 2. Remove the cover on the bottom of the mobile router.
- 3. Place your thumbs on the arrows on the cover and press down while sliding the cover up.
- 4. Leave the battery in place.
- 5. Locate the Reset button.



- **6.** With a sharp object such as a paperclip, press and hold the **Reset** button for five seconds. The mobile router returns to factory settings.
- 7. Replace the cover on the back of the mobile router.

Reboot the Mobile Router

You can reboot the mobile router from the NETGEAR mobile app or from a web browser.

Reboot the Mobile Router From the NETGEAR Mobile App

▶ To reboot the mobile router from the NETGEAR mobile app:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

Nighthawk LTE Mobile Hotspot Router Model MR1100

4. Tap Dower.

The Power Options page displays.

5. Tap REBOOT DEVICE.

The mobile router reboots.

Reboot the Mobile Router From a Web Browser

▶To reboot the mobile router from a web browser:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. In the upper, right corner, click the **menu** icon.

The menu opens.

- 5. Select Reboot.
- 6. When prompted, click the **REBOOT** button.

The mobile router reboots.

Power Off the Mobile Router

You can use the **Power** button on the mobile router to turn it off, or you can log in to the mobile router with a browser and shut down the mobile router.

Power Off the Mobile Router Manually

►To power off the mobile router manually:

Press and hold the **Power** button on the device for a few seconds.

Power Off the Mobile Router From the NETGEAR Mobile App

▶ Power off the mobile router from the NETGEAR Mobile app:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

Nighthawk LTE Mobile Hotspot Router Model MR1100

4. Tap O Power.

The Power Options page displays.

5. Tap POWER OFF DEVICE.

The mobile router turns off.

Power Off the Mobile Router From a Web Browser

▶To power off the mobile router from a web browser:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. In the upper right corner of the page, click the menu icon.

The menu opens.

- 5. Select Power Off.
- 6. When prompted, click the **SHUTDOWN** button.

The mobile router powers off.

View Details About Your Mobile Router

You can view details about your device such as the model number, software version, and IMEI (International Mobile Equipment Identity).

View Mobile Router Details From the NETGEAR Mobile App

► To view details about your device from the NETGEAR Mobile app:

- 1. On your smartphone, connect to the mobile router's WiFi network.
- 2. Launch the NETGEAR Mobile app.
- 3. Swipe down.

The dashboard displays.

- Tap Settings
- 5. Tap About.

The About page displays.

View Mobile Router Details From a Web Browser

► To view details about your device from the mobile router web page:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select **SETTINGS** > **About**.

The About page displays.

Frequently Asked Questions

9

This chapter provides answers to common questions about your mobile router. (Also see *Troubleshooting* on page 82.)

The chapter covers the following topics:

- Why can't my device connect to the mobile router? on page 77
- Why can't I access the Internet? on page 77
- Why is the signal indicator always low? on page 77
- Why is the download or upload speed slow? on page 77
- What do I do if I forget my admin login password? on page 78
- How do I disconnect from the mobile broadband network? on page 78
- The LCD is not lit. How do I know if the mobile router is still powered on? on page 78
- How do I find my computer's IP address? on page 78
- How do I find a device's MAC address? on page 80
- Where can I find more information? on page 81

Why can't my device connect to the mobile router?

If you are experiencing problems connecting to the mobile router, try the following suggestions:

- If you are using the NETGEAR Mobile app and it does not find the mobile router, make sure that your smartphone is connected to the mobile router's WiFi network.
- Turn off your device and take the battery out, wait 10 seconds, put the battery back in, and turn your device on.
- Restart your computer.
- Turn off or temporarily disable any security programs or firewalls.
- If possible, try using another computer or mobile device to connect to your mobile router. If you can, then the problem is with the device that cannot connect, not the mobile router.

Why can't I access the Internet?

If you are connected to the mobile router but cannot connect to the Internet, try the following suggestions:

- Check the display status on the LCD.
- Make sure that network coverage is available in your area.
- Make sure that your SIM card is active and enabled with data services.
- Wait one to two minutes for the mobile router to initialize.
- Confirm that your account is activated and that no other Internet connections are active.
- Switch your mobile router off and on and restart your computer or WiFi device.

Why is the signal indicator always low?

Your mobile router's reception is poor. Try moving it to a location with a clear view of the sky (for example, near a window).

Why is the download or upload speed slow?

Data transfer speed depends on signal strength and interfering radio sources like electrical generators or other mobile router WiFi devices. Review the following possibilities:

- Check your signal strength and network type (for example, LTE 4G is generally faster than 3G).
- Check WiFi interference by powering the mobile router off and on to find a better WiFi channel.
- Switch WiFi channel from 2.4 GHz to 5 GHz.
- If the network signal is low, consider using external antennas or cradle the mobile router with built-in high-gain antennas.

What do I do if I forget my admin login password?

The default admin login password is attadmin, and the mobile router web page URL is http://192.168.1.1.

If you changed the admin login password and can't remember the password that you created, you must set the mobile router back to factory defaults. For information about how to reset to factory default settings, see *Factory Reset* on page 71.

How do I disconnect from the mobile broadband network?

▶To disconnect from the network from the mobile router web page:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the mobile router password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Advanced Settings > Cellular.

The Network Settings page displays.

- 5. Clear the Data check box.
- 6. Click the Apply button.

Your settings are saved.

The LCD is not lit. How do I know if the mobile router is still powered on?

The LCD dims to save energy. The LED continues to blink slowly to indicate that the mobile router is still powered on. To wake the LCD, press and quickly release the **Power** button.

How do I find my computer's IP address?

The steps for finding your computer's IP address depend on the operating system. If your device runs an operating system not listed here, see the appropriate operating system documentation.

How do I find my computer's IP address on a Windows 7, Windows Vista, or Windows XP device?

To find the IP address on a Windows 7, Windows Vista, or Windows XP device:

- 1. Open the command prompt window:
 - a. Select Start > Run.
 - **b.** Enter **cmd** or command and click the **OK** button.
- 2. At the command prompt, enter **ipconfig** and press **Enter**.
- 3. Write down the IP address for the entry that relates to the wireless network connection. The IP address might be listed under IPv4 Address or something similar.

How do I find my computer's IP address on a Windows 8 device?

To find the IP address on a Windows 8 device:

- 1. In the Charms bar, click the **Search** icon.
- 2. Select Command Prompt.
- 3. At the command prompt, enter ipconfig and press Enter.
- **4.** Write down the IP address for the entry that relates to the WiFi network connection. The IP address might be listed under IPv4 Address or something similar.

How do I find my computer's IP address on a Mac OS X device?

▶ To find the IP address on a Mac OS X device:

- 1. From the Apple menu, select **System Preferences > Network**.
- Select the wireless adapter.The IP address is displayed in the right pane.

How do I find my computer's IP address on devices running other operating systems?

► To find the IP address on devices running other operating systems:

Refer to the user documentation for your operating system or computer.

How do I find a device's MAC address?

You must know the MAC address for a device when you are doing the following:

- Assigning an IP address based on a MAC address (when using DHCP)
- Allowing or denying devices access to your WiFi network (MAC filtering)
 - **Tip** The steps for finding a device's MAC address depend on the operating system. If your device runs an operating system not listed in the following procedures, see the appropriate operating system documentation.

How do I find a device's MAC address on a Windows 7, Vista, or XP device?

► To find the MAC address on a Windows 7, Vista, or XP device:

- 1. Open the command prompt window:
 - a. Select Start > Run.
 - b. Enter cmd or command and click the OK button.
- 2. At the command prompt, enter ipconfig /all and press the Enter button.
- 3. Write down the physical address for the entry that relates to the wireless network connection. It appears as a series of numbers and letters. This is the MAC address of your wireless adapter.

How do I find a device's MAC address on a Windows 8 device?

▶To find the MAC address on a Windows 8 device:

- 1. In the Charms bar, click the **Search** icon.
- 2. Select Command Prompt.
- 3. At the command prompt, enter ipconfig /all and press the Enter button.
- **4.** Write down the physical address for the entry that relates to the wireless network connection. It appears as a series of numbers and letters. This is the MAC address of your wireless adapter.

How do I find a device's MAC address on a Mac OS X device?

▶ To find the MAC address on a Mac OS X device:

- 1. From the Apple menu, select **System Preferences > Network**.
- 2. Select the wireless adapter that is connecting to the routing hardware.

Nighthawk LTE Mobile Hotspot Router Model MR1100

- 3. Select Advanced.
- 4. Select Ethernet.

The Ethernet ID is displayed. This is the same as the MAC address.

Where can I find more information?

Review the following:

- The quick start guide hat came with your mobile router.
- Visit *support.netgear.com*, click the **Support for Home Products** link, search for your network service provider, and select your mobile router from the list of products to do the following:
 - Update the firmware on your device (if an update is available)
 - View a tutorial
- Learn tips and tricks at *netgear.com/learningcenter/mobile* to get the most from your mobile router.
- Information about accessories is available at netgear.com/XXXXaccessories.

Troubleshooting

10

This chapter provides suggestions for troubleshooting problems that might arise when you are using your mobile router. The chapter covers the following topics:

- Diagnostics on page 83
- The WiFi Network Name Is Not in the List of Networks on page 83
- The No Signal Icon Displays on page 83
- Cannot Log In to the Mobile Router Using a VPN on page 83
- The Mobile Router Cannot Connect to a Computer Running Windows Vista on page 84
- The Mobile Router Does Not Connect to the Cellular Network on page 84

Diagnostics

To view diagnostics:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the administrator login password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Mobile Router Status > DIAGNOSTICS.

The Diagnostics page displays.

The WiFi Network Name Is Not in the List of Networks

If you do not see the mobile router's WiFi networks from your computer or mobile device, try these suggestions:

- Refresh the list of networks.
- If the LCD is dark, the WiFi radio might be asleep. Press the Power button to wake the mobile router.
- If the mobile router is tethered to your computer, make sure that WiFi is set to stay on when the mobile router is tethered. See *Use the USB Type C Cable to Charge Only* on page 23.

The No Signal Icon Displays

If the No Signal icon (2) displays on either the LCD or the mobile router web page, make sure that you are in your network service provider's coverage area.

Cannot Log In to the Mobile Router Using a VPN

If you are using your mobile router while connected to a VPN, you might not be able to access the mobile router web page using <keyword keyref="router-web"/>.

To directly access the mobile router web page hosted on the device, enter the address http://192.168.1.1 in your browser.

The Mobile Router Cannot Connect to a Computer Running Windows Vista

A known issue exists whereby computers running Microsoft Windows Vista cannot obtain an IP address from certain routers. More information and a fix are available at *support.microsoft.com/kb/928233*, or visit the Microsoft support website and search for knowledge base article 928233.

The Mobile Router Does Not Connect to the Cellular Network

If your mobile router does not connect to your service provider's mobile broadband network, try the following suggestions:

- Make sure that your SIM account is active. To check SIM status, contact your Internet service provider.
- If you use a prepaid SIM card, make sure that the account balance is positive.
- If your mobile router still does not connect, you might need to create or update the default connection profile.

To check the default connection profile settings:

- 1. From a computer that is connected to your network, launch a web browser.
- 2. Enter http://192.168.1.1.

A login page displays.

3. Enter the mobile router password.

The password is case-sensitive.

The dashboard displays.

4. Select SETTINGS > Advanced Settings > Cellular.

The Cellular page displays.

5. In the APN section, review the ISP settings.



6. To change the active APN or to change the APN settings, click the ■ Edit icon.
For more information about changing these settings, see Specify Cellular Settings on page 33.

Specifications



This appendix covers the following topics:

- Mechanical Specifications on page 86
- Environmental Specifications on page 86
- Supported RF Bands on page 86

Mechanical Specifications

Table 3. Physical dimensions

Parameter	Dimension
Weight	132 g (4.66 oz)
Length	112 mm (4.41 in.)
Width	69 mm (2.7 in.)
Thickness	15 mm (.59 in.)

Environmental Specifications

Table 4. Recommended operating and storage temperatures

Environment	Temperature
Operating temperature	0°C to 35°C (32 F to 95°F)
Storage temperature	-10°C to +60°C (14°F to 140°F)

Supported RF Bands

Table 5. Supported RF bands

Technology	Bands
4G LTE CA	1800+700, 1800+2600, 2600+700, 2600+2600, 700+1800+2600, 1800+2600+2600, 700+2600+2600 MHz
4G LTE	700, 900, 1800, 2100, 2600 MHz
3G	850, 900, 1900, 2100 MHz