


Step 1. Attach the Wall Mount Bracket


Insert the tabs on the wall mount bracket into the slots in the first and third rows on the back of the IP phone. And then slide the wall mount bracket rightwards to lock it in place.

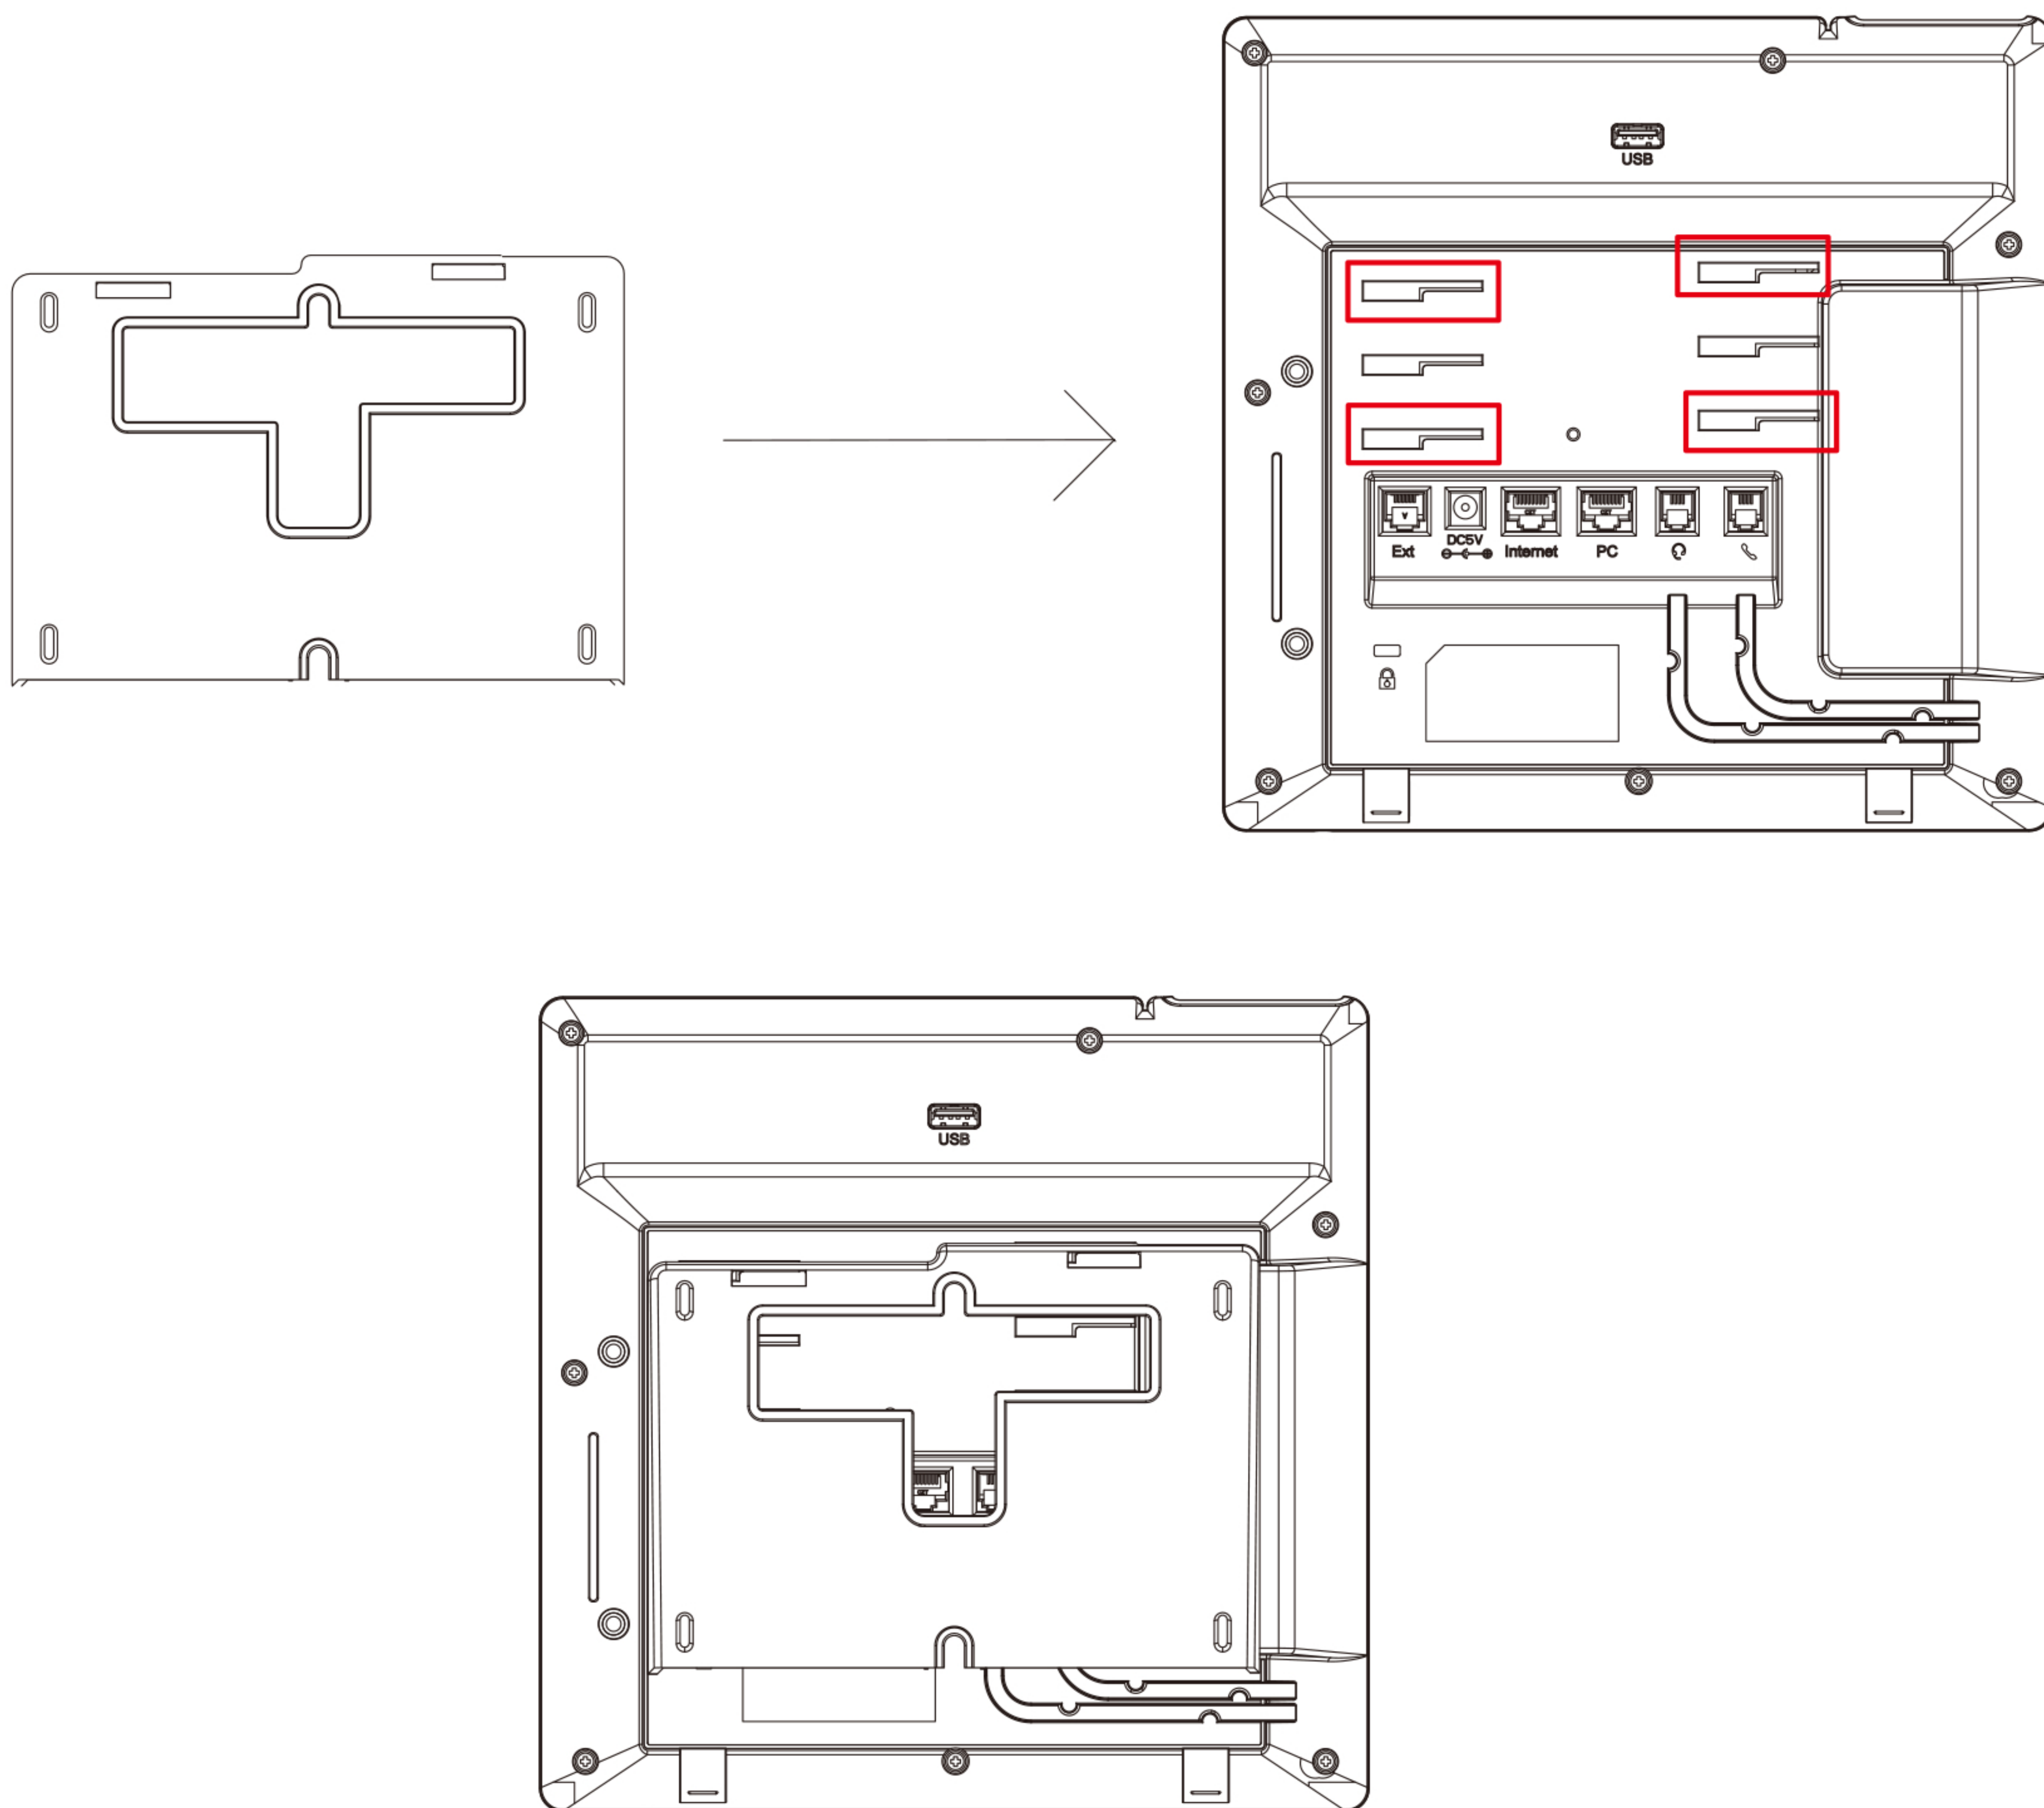

Step 2. Drill assembly holes in the wall

Locate two assembly holes vertically with a spacing of 100mm.

If there is a port on the wall, it shall be located right in the middle of the two assembly holes.

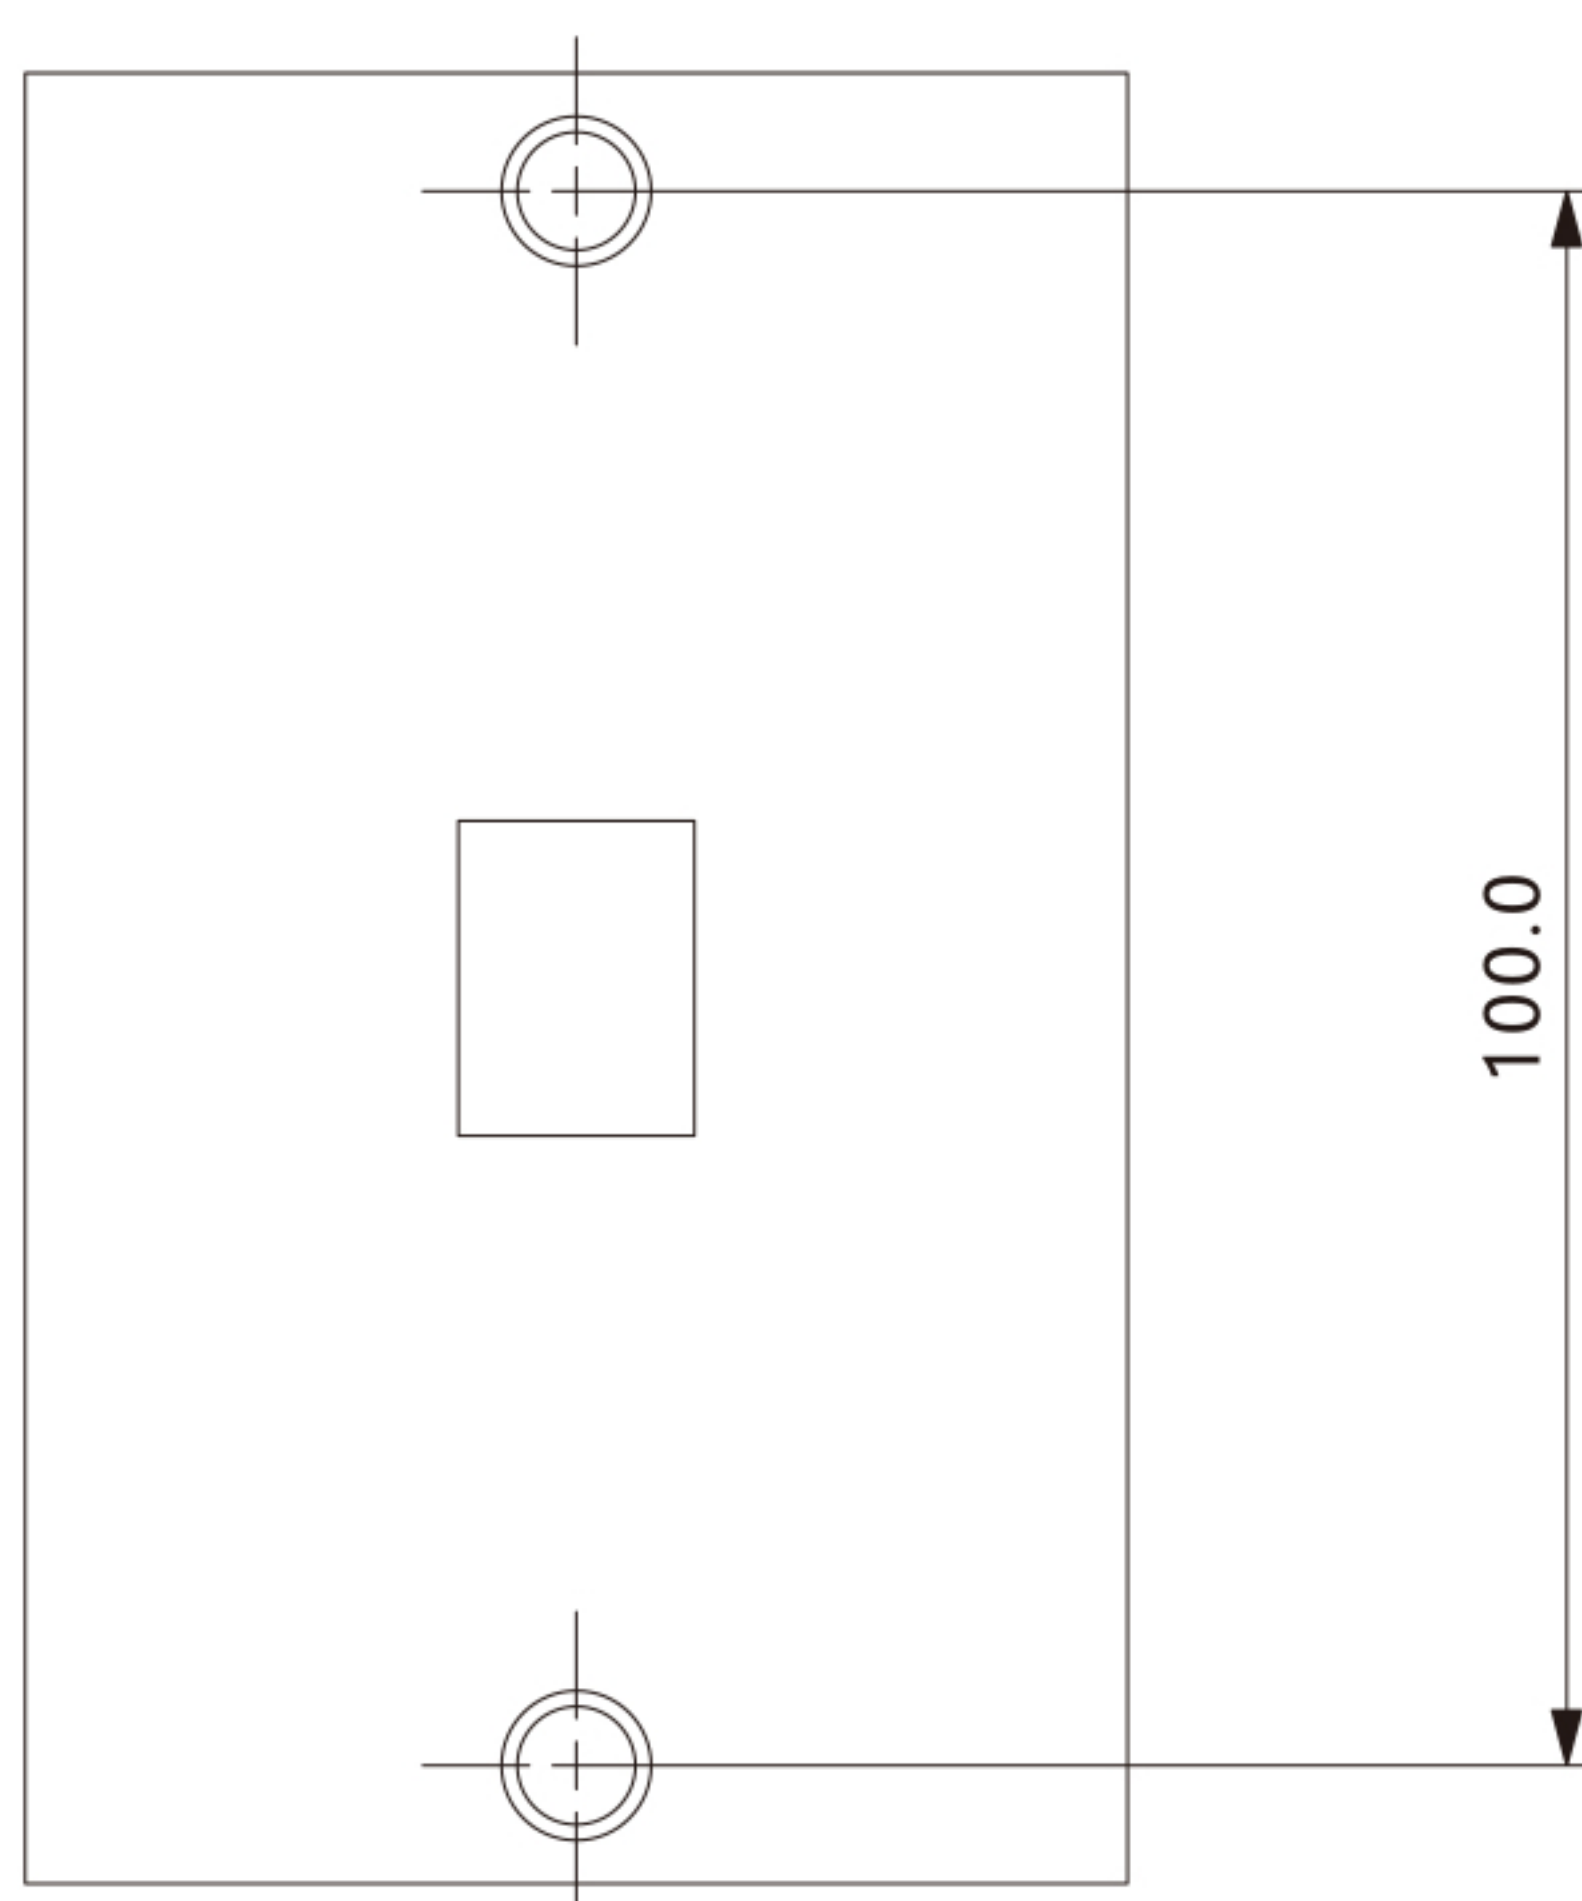

Note: $\Phi 8 \times 40$ expansion tube with M5*40 tapping screw is recommended

Step 3. Mount the phone to the wall

Hang the wall socket of the wall mount bracket downwards onto screws mounted in the wall.

